

5. Charging method

(1) Charging the Charging Case

- When you put the earphones into the charging case for charging, both the charging case and the earphones will be charged.
- When using a USB AC adapter (sold separately), first insert the adapter's plug into a household power outlet.
- Insert the Type-A terminal of the included charging cable into the adapter or the USB port of a computer.
- Insert the Type-C terminal of the charging cable into the charging port on the back of the charging case.
- While charging, the charging indicator light will flash. When charging is complete, the flashing light will turn solid.
- After charging is complete, remove the Type-C terminal, the Type-A terminal, and the adapter plug in that order.

(2) Charging the Earphones

- If there is water or sweat on the earphones, wipe them off thoroughly.
- When you put the earphones into the charged charging case and close the lid, charging will begin.

Charging indicator light display contents

Charging Status	Charging Case Charging	Battery level display during earphone charging
100%	○ ○ ○ ○	○ ○ ○ ○
80%以上	○ ○ ○ ☼	○ ○ ○ ●
50~80%	○ ○ ☼ ●	○ ○ ● ●
20~50%	○ ☼ ● ●	○ ● ● ●
20%以下	☼ ● ● ●	● ● ● ●

6. Earphones Power On

Automatic power on

- When you open the lid of the charging case, the earphones will automatically turn on.
- If there is a charging case: When you put the earphones back into the charging case and close the lid, the earphones will automatically turn off and start charging.
- If the earphones are not connected to a Bluetooth device for 5 minutes, the power will automatically turn off to save energy.

7. Pairing with Bluetooth Devices

(1) Initial Registration of Bluetooth Devices


- Turn on the power of one or both earphones and set them to pairing mode.
- Place the Bluetooth device you want to connect within a range of 1 meter, and register it on the device.
- On the Bluetooth settings screen of the connecting device, select "King Lucky i131" from the list of devices.

(2) Normal Use of Paired Devices

- If the registered Bluetooth device is in pairing mode, the earphones will automatically connect to that device when you turn on the power next time and thereafter.

(3) How to delete Bluetooth pairing records using the charging case

- Put the earphones into the charging case and keep the lid of the charging case open. Press and hold the Bluetooth reset button on the side of the charging case for 5 seconds.
- After this operation, to reconnect, you need to manually open the Bluetooth settings page on the Bluetooth device, search for "King Lucky i131", and perform the initial connection.

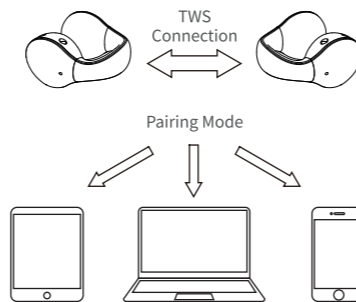

8. Basic Operations

	Control	Left	Right
Music playback	Play/pause	tap twice(either side)	
	Previous song	tap 3 times	
	Next song		tap 3 times
Conversation	Answer the call	tap twice (either side)	
	Reject the call	Press and hold for 2 seconds (either side)	
	Call ended	tap twice(either side)	
Voice assistant (Siri and Google Assistant)		Press and hold for 2 seconds (either side)	

9. Main specifications

- ※The maximum communication distance, usage time, and charging time are just a guideline and will vary depending on usage conditions.
- ※ Specifications and appearance may change without prior notice, or product availability may be discontinued.
- ※The illustrations used in this book may differ from the actual product.

Product Specifications

Headphone	
Wearing method	Clip-on
Material	Shape Memory Alloy Wire + TPE
Conduction mode	Air conduction
Connection mode	Bluetooth5.3
Headphone model	Class2
Maximum communication distance	33 feet
Operating frequency range	2.4GHz~2.48GHz
Driver diameter	13mm
Frequency range	20Hz~20kHz
Voice Assistant	Siri/Google Assistant
Battery capacity	30mAh

Charging case	
Battery capacity	300mAh
Charging time	About 2.5 hours
External dimensions / weight	About W77×D33×H23mm
External dimensions / weight	About 36g

KING LUCKY Co., Ltd.

3-4-10 Shimbashi, Minato-ku,
Tokyo 105-0004
Website: <http://www.kinglucky.jp>
Email: info@kinglucky.jp


Customer Support for Product Inquiries

Phone: 03-3528-8268
Office Hours: 9:00-17:00
(Excluding Saturdays, Sundays, holidays, and year-end/new year holidays)

Instruction Manual


KING LUCKY

open ear headphones i131

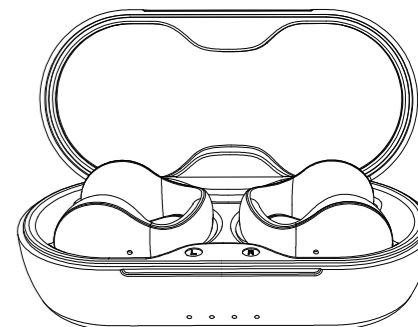

- In this user manual, in addition to how to handle the product, you can also learn about important precautions for preventing accidents.
- In order to use the product safely, even after reading, please keep it in a safe place.


1.Item List

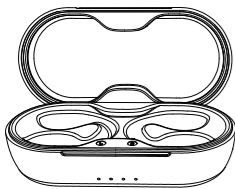


① Charging case



② Headphone unit

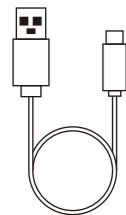


③ Charging cable

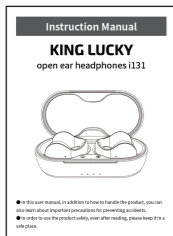


④ Instruction Manual

2.Names of each component

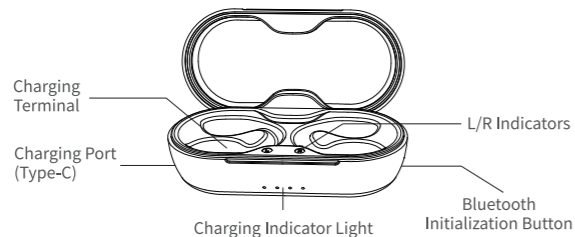

Charging case

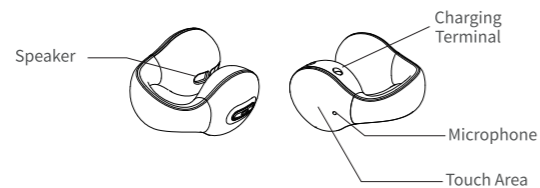

Headphone unit

3.Safety Tips

To ensure the safe and correct use of this product, please read this product before use. And put it where you can see it at any time.

Meaning of warning icon

⚠ Danger : The content may cause death or serious injury.

⚠ Warning : Contents that may cause death or serious injury.

⚠ Attention : Contents that may cause injury or property loss.

⊘ : Prohibit decomposition

⊘ : Prohibited conduct

⚠ : Reminder

! : Indicate the action

(1) Instructions for use

⚠ Danger

⊘ This product has built-in rechargeable battery (lithium polymer battery), which will not be disassembled or damaged. Fire, fever, leakage, rupture and eating by mistake may cause serious injury or blindness.

⊘ Do not use, store or place it near an open flame, in direct sunlight, in a car under the scorching sun or in a high temperature place. It can cause fire, heat, liquid leakage, rupture and failure.

⊘ Do not use, keep or place in places with much water. Liquid entering this product will cause fire, electric shock and failure.

! Use special charging box and matching charging cable to charge in the specified way. Charging in an unspecified way can cause heat, leakage, rupture or failure.

Warning

⊘ Do not damage the charging cable. (Scratching, machining, approaching heat appliances, forcibly bending, twisting, pulling, binding, etc.) Short circuit may lead to fire.

Do not put anything other than headphones in the charging box. May cause fire, electric shock or failure.

The headphone charging interface is wet and cannot be put into the charging box. May cause electric shock, injury or malfunction.

Do not touch the charging terminal of the charging box with your fingers or hands. May cause electric shock, injury or malfunction.

Do not put heavy objects on headphones, charging boxes and charging lines. Damage, failure, wire damage resulting in fire or electric shock.

⊘ Do not use cars or other means of transportation in dangerous places (such as railway crossings, station platforms, places where cars pass, construction sites, etc.). Could lead to an accident.

Do not put it within reach of infants and young children. Drinking by mistake may cause accidents.

Do not use it indoors in medical institutions and near medical appliances. Radio waves from the equipment may affect the operation of medical electrical equipment and may lead to accidents.

In crowded places such as full trams, do not use pacemakers because someone nearby may have installed them. Radio waves from this machine may affect the operation of cardiac pacemaker.

Do not use near automatic control equipment (such as automatic doors or fire alarms). Due to the influence of radio waves, it may become the cause of misoperation.

⊘ Don't listen loudly for a long time. May lead to coffee hearing disorder, etc.

When using cardiac pacemakers, the distance from the wearing part should be no less than 22 cm. Radio waves from this machine may affect the operation of cardiac pacemaker.

! Use it correctly on the plane according to the instructions of the airline. Radio waves from this machine may have an impact, resulting in misoperation and accidents.

In case of abnormal conditions such as smoke, peculiar smell and excessive heating during use, stop using and charging immediately, turn off the power supply, and take out the earphone from the charging box at the same time. Do not use this product again, please contact our contact person.

Attention

⊘ Do not place it in a place where vibration or impact is large or unstable (such as swaying or tilting base). Falling causes damage or failure.

Do not touch with hands stained with soap or oil. Moisture may seep in.

Do not blow dry with a hair dryer. It may deform.

⊘ Do not wipe with diluents, volatile oils, alcohol, etc. Become the cause of deformation and discoloration.

Keep magnetic cards such as cash cards away from headphones and charging boxes. The built-in magnets in this product may damage the card information.

Do not put this product in the back pocket of trousers or in a bag. Sitting in a chair or other place without paying attention, or exerting force on a schoolbag, may cause deformation, damage or failure.

! During charging and newly charged headphones may be in a high temperature state, so pay attention when wearing them immediately after taking them out. If used in high temperature, it may cause redness, itching and rash.

! Reduce the volume before connecting headphones. If the volume is too high when connecting, it may suddenly make a loud sound.

If you feel abnormal ears or skin, stop using it. If used directly, it may cause inflammation and rash.

(2) Destruction matters

- Built-in rechargeable batteries can be recycled as valuable resources.
- When destroying packaged products, please abide by the regulations of the local government. Please consult local governments about the contents of the regulations.

4.Installation method

- Pay attention to the left/right sides, spread out the flexible part that can be freely bent, and gently clip it onto the ear.
- Adjust it along the ear contour to a stable position.

